

Formatting SD Cards (audio device/camera)

Emergency number (for questions, problems or disturbances regarding the audio/video recording or data transfer): **(+43) 676 5451988**

Formatting the SD card of your audio recording device

- To switch on the device, please use the slider on the side of the device (power) (see fig. 1). Press “menu” to access the main menu of the audio recording device (fig. 2).



Fig. 1



Fig. 2



Fig. 3



Fig. 4

- Use the (minus) arrow button to navigate to “Gerätemenü” (wrench) (fig. 3). Use the (right & minus) arrow buttons to navigate to “Formatieren” (fig. 4) and press OK.
- Again, using the arrow buttons, choose “microSD Karte” and confirm with OK (fig. 5). Choose “Start” and confirm with OK (fig. 6). At this point, all the data stored on the microSD card will be deleted.

Fig. 5



Fig. 6



Formatting the camera's SD card

- Flip open the LCD display (see fig. 1). Use the movable toggle button at the top left to enter the menu. Confirm by pressing this button. Select "Setup" in the menu and confirm again (see fig. 2)



Fig. 1



Fig. 2

- In the setup, choose "Format" and then "Memory Card" (fig. 3 & 4).



Fig. 3



Fig. 4

- Confirm the formatting of the SD card with "OK" (Fig. 5) (pressing the moveable button). This will delete all data stored on the SD card.

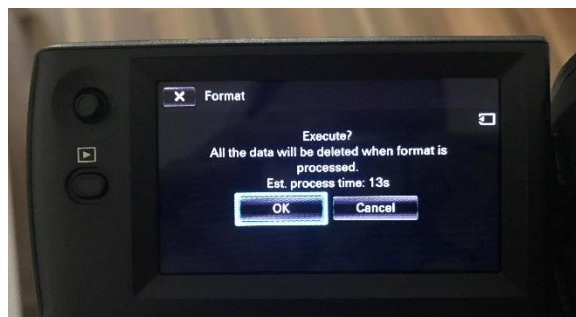


Fig. 5